 


# OCTA PANEL

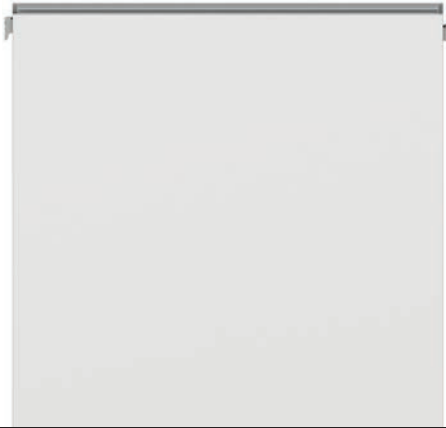

# OCTAPANEL

 
## WALLSYSTEM



## OCTAPANEL

### QUICK & VERSATILE

### UNIFIED INTO ONE SYSTEM

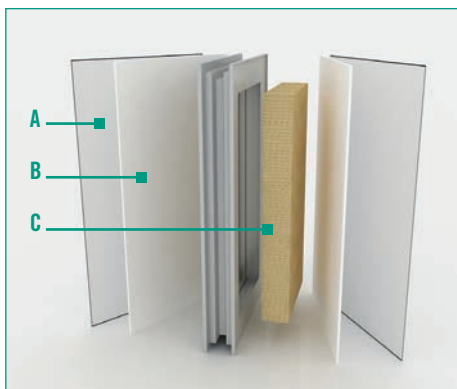

#### WALL STRUCTURE

- A: fire proved
- B: medium density fibreboard
- C: honeycomb paper

#### Wall to wall. In just 5 seconds.

Set up times at trade fairs are becoming shorter and shorter. That is why it is important to have a system at hand that is not only quick but also easy to set up and dismantle. By simply snapping the connectors into place, the individual wall elements are joined together and then screwed tight. With OCTApanel you save valuable time.

#### Versatile. Seamless. Individual.

The 2480 mm high wall elements are available in three widths: 950, 970 and 990 mm. Lined up next to each other, the result is a completely seamless surface for attractive graphics. Integration of LED panels, OCTAlumina illuminated frames or monitors can be used to showcase additional highlights. The stand construction method is just as versatile as the range of applications: In addition to the installation of doors and 90° bends, right-angled wall outlets can be positioned as desired along the course of the wall.

 
#### Advantages:

- Quick assembly and disassembly
- Seamless connection of the individual elements
- Multifunctional modules
- Compatible with all OCTANORM systems
- Flexible construction incl. T-connection at any position
- Completely disguised aluminium construction
- Light weight (20 kg per element)
- all-round edge protection


## TECHNICAL FEATURES

OCTApanel



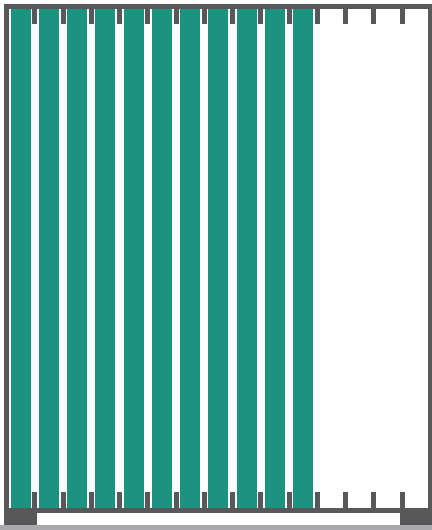


①

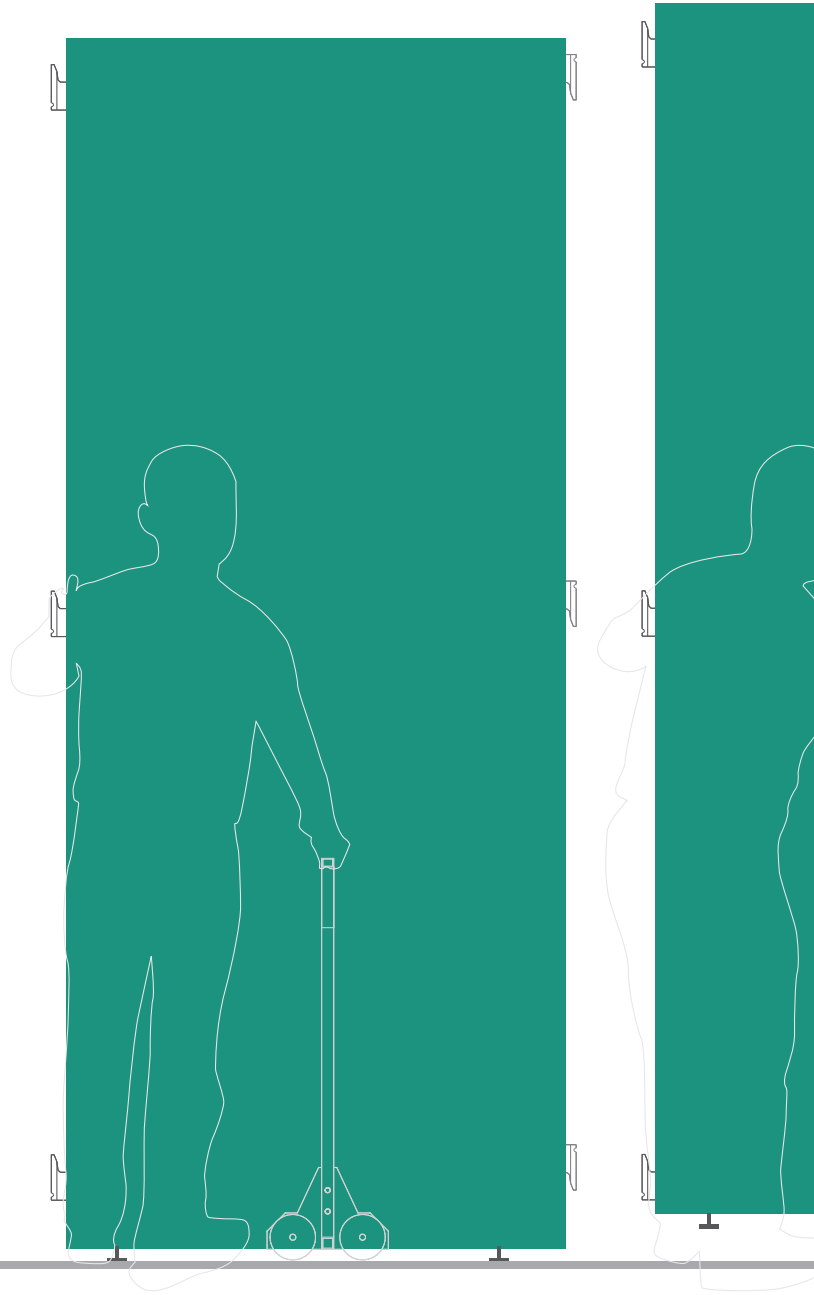 

②



# ASSEMBLY

 OCTApanel

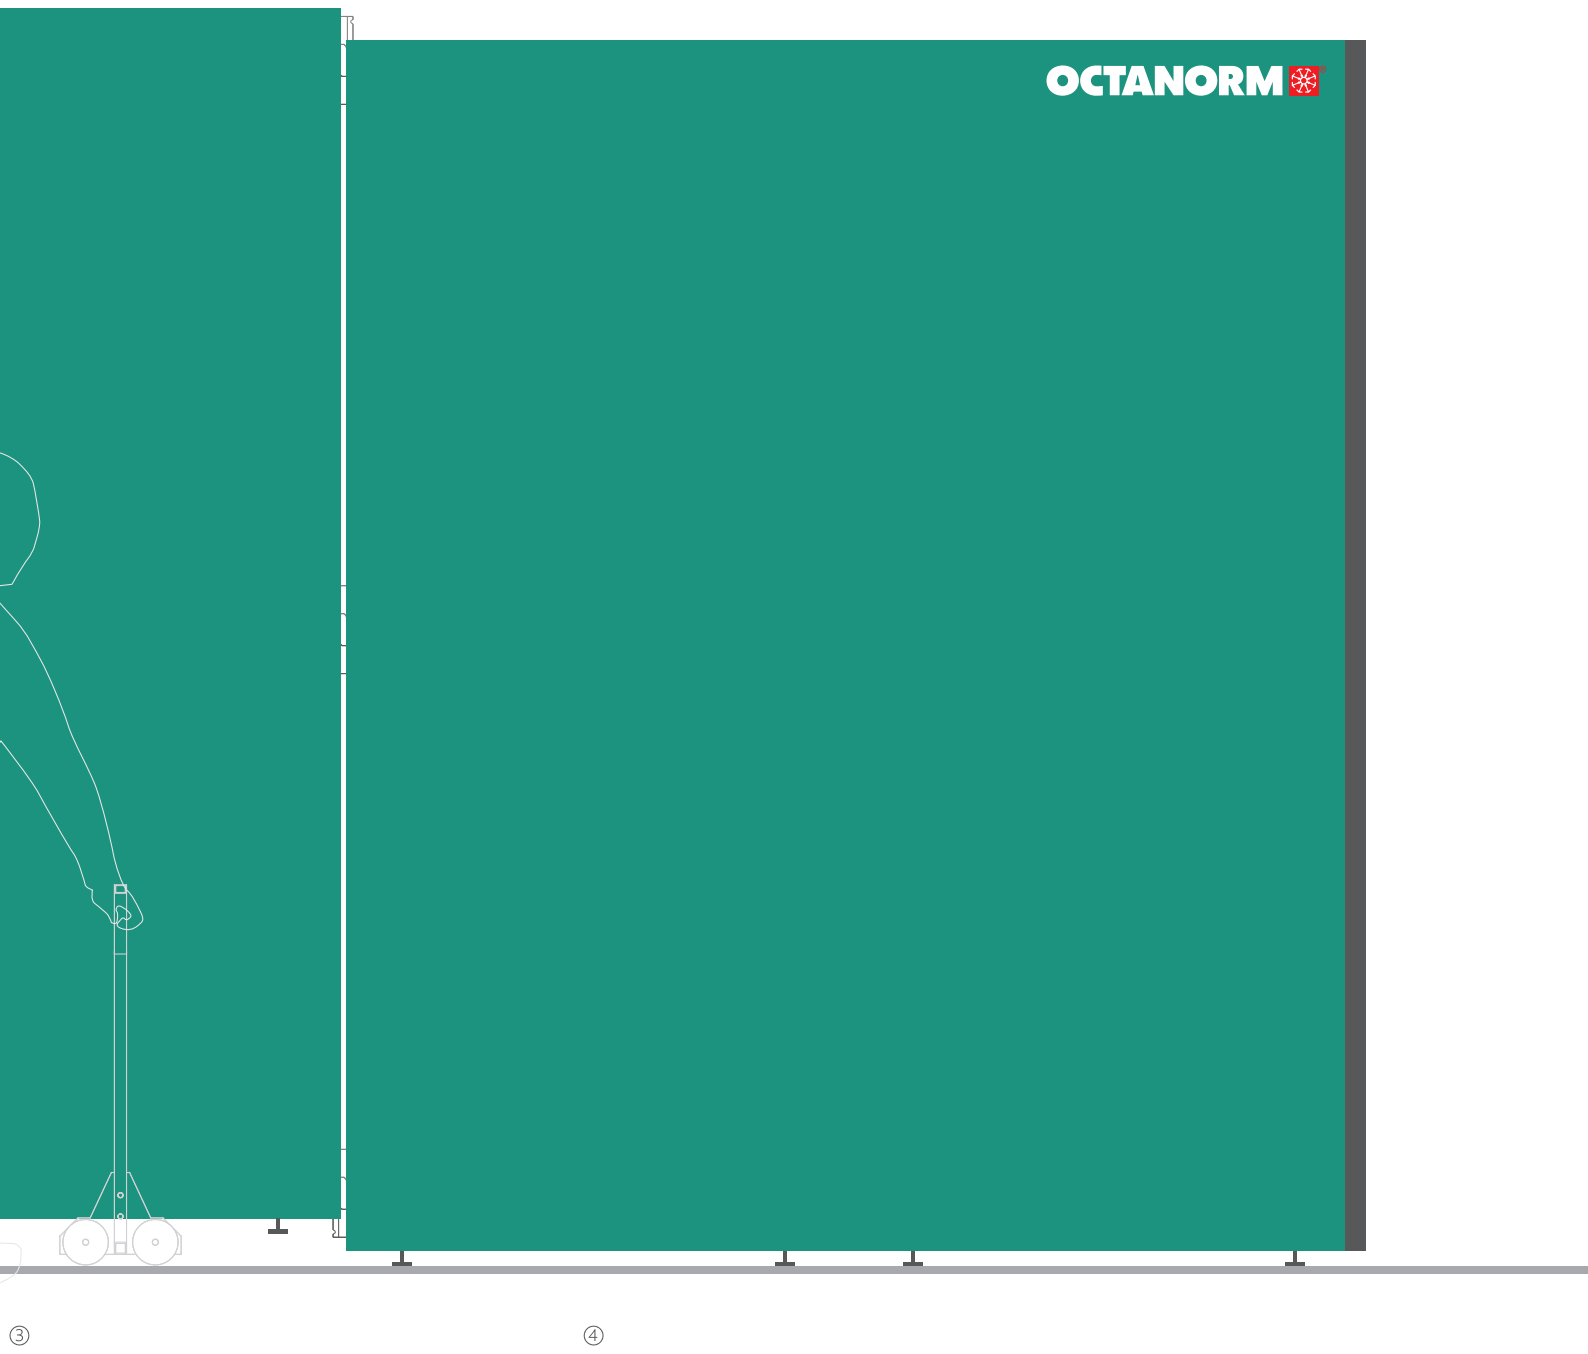

**Horizontal wall element connection:**

  1. There are two different connectors:
  - “Type D” with an opening from above
  - “Type U” with an opening from below
2. Position the wall element with the “Type U” connectors using a mobile lifting tool so that the connectors are on top of each other
3. Lower the wall slowly and fix both wall elements together (hexagon socket)

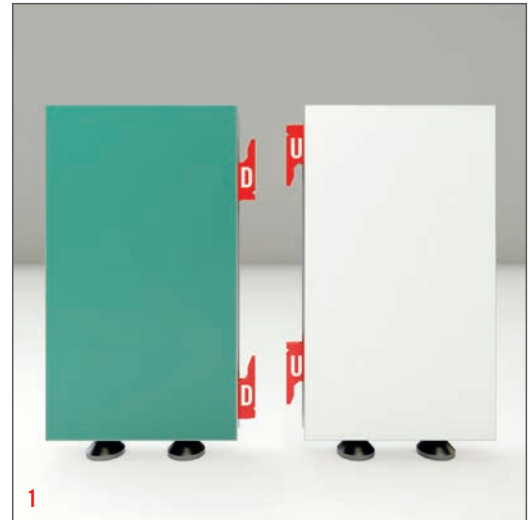



**Vertical wall element connection:**

1. Position wall elements one above the other
2. Move the wall elements against each other and mount the stiffening extrusion on both sides
3. Connect walls with each other (hexagon socket)








**Connection at a 90° angle:**

  1. Attach accessory to wall element with Allen screw
2. Fix the wall element at a 90° angle and mount the L-connector

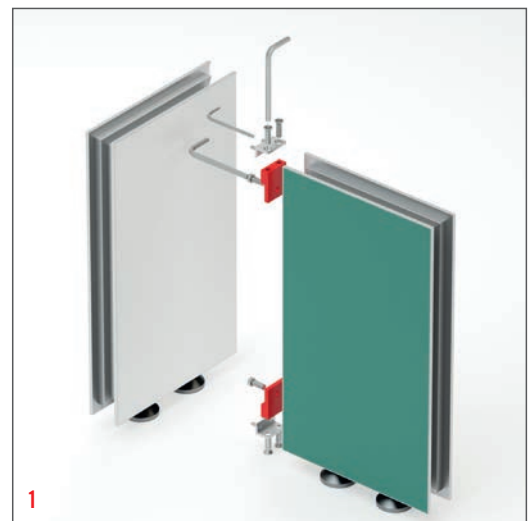

# ASSEMBLY
     
## OCTApanel

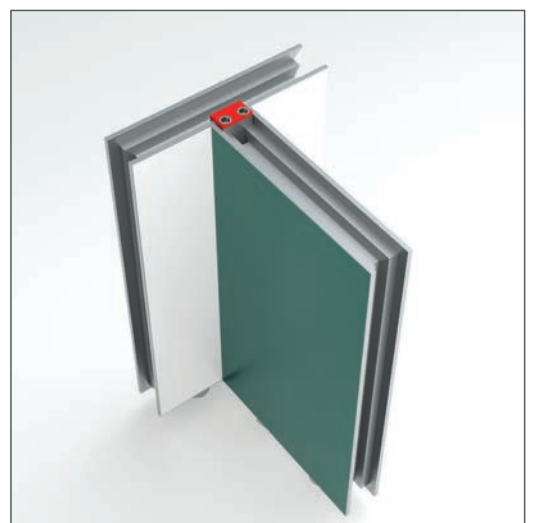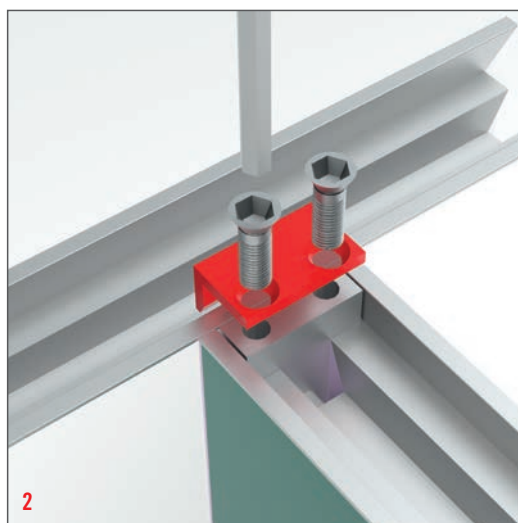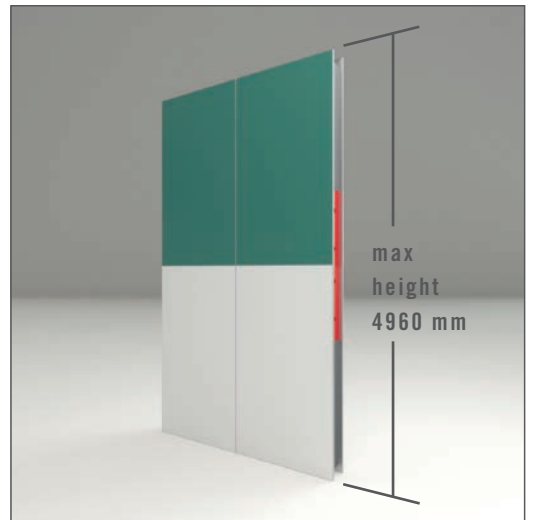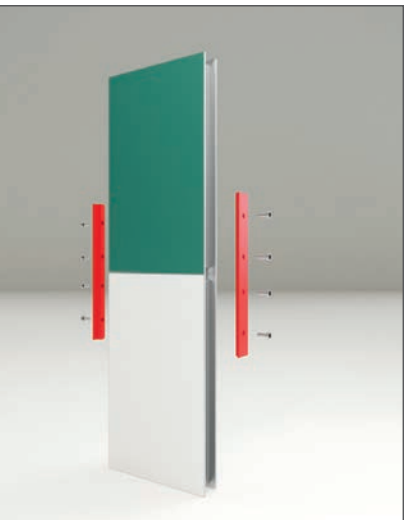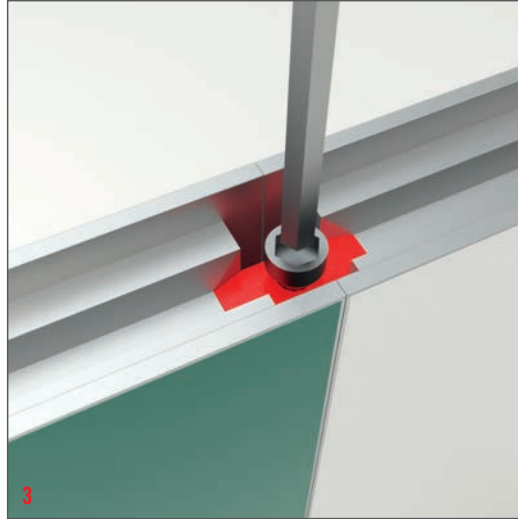



**Covering of the front side:**

1. Attach the magnetic component to the holes in the wall element
2. Attach magnetic tape at the appropriate position on the rail
3. Fasten end rail



**Connection wall element with Maxima light:**

 
 
1. Slide the top and bottom connectors into the system groove of the Maxima extrusion and tighten with 2 Allen screws
2. Fix cylinder screws into the top and bottom of the wall element (hexagon screw)
3. Lift the wall with a rollable lifting tool, insert the screw into the connector of the Maxima extrusion and slowly lower the wall
4. Fix the wall element to the extrusion from above using an Allen screw

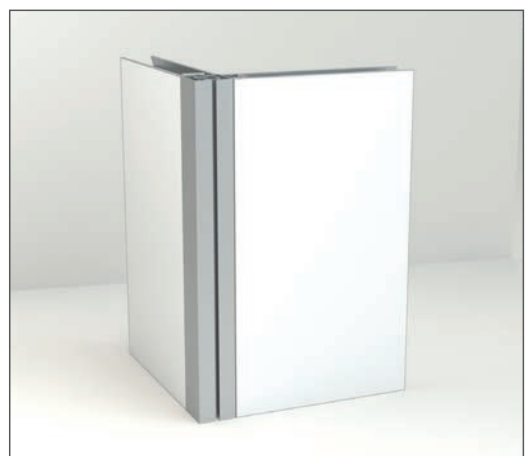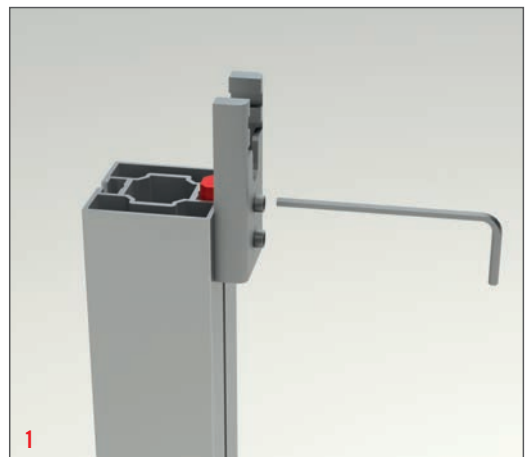





# ASSEMBLY
   
## OCTApanel

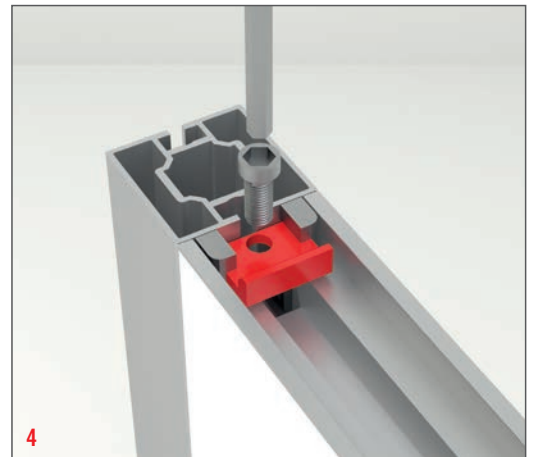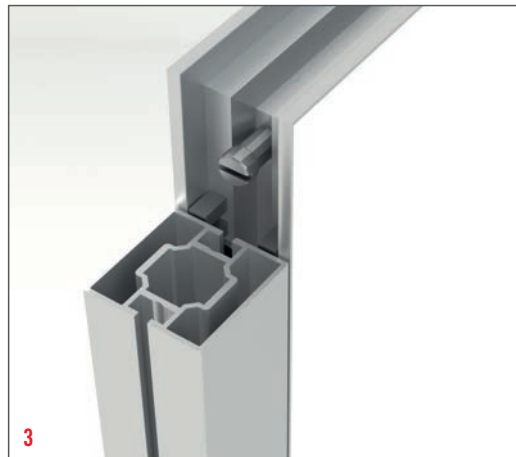



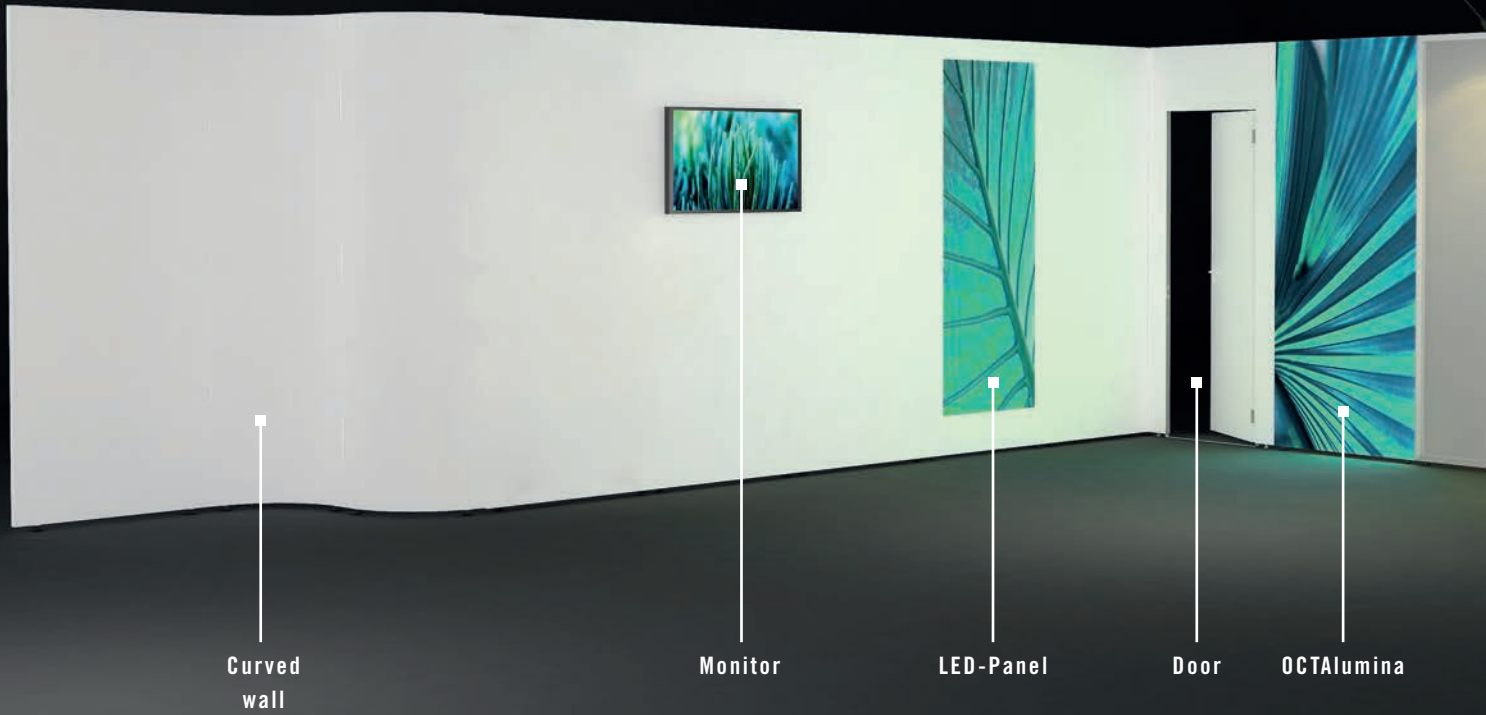


## OCTAPANEL FOR MUSEUMS, EXHIBITIONS, RETAIL AND TRADE FAIR STANDS OF ALL KINDS

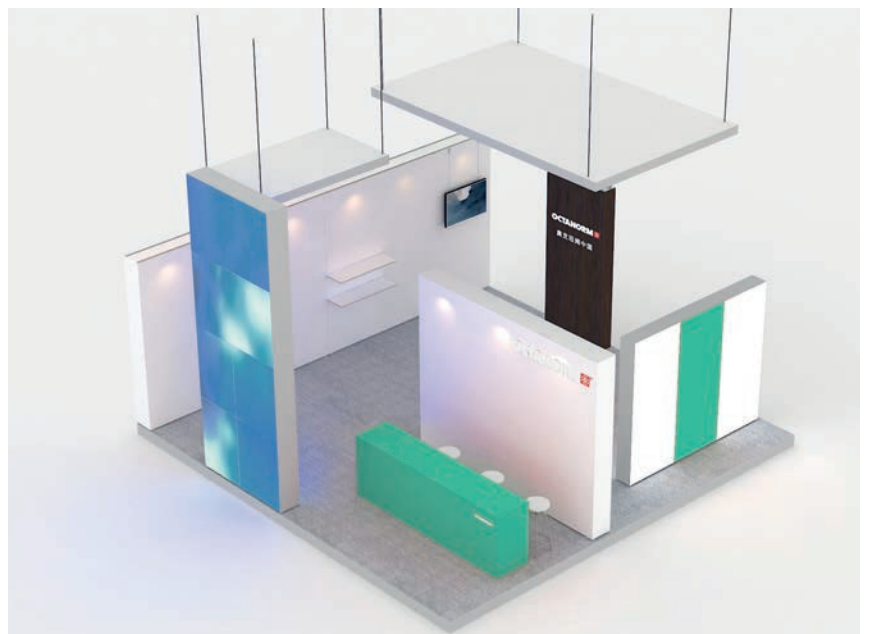 

# IN USE
   
## OCTApanel

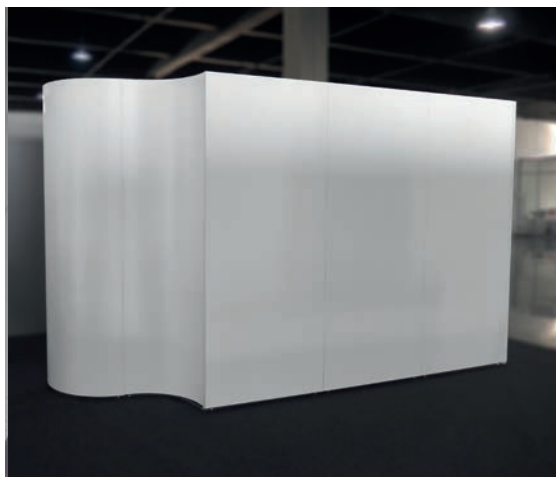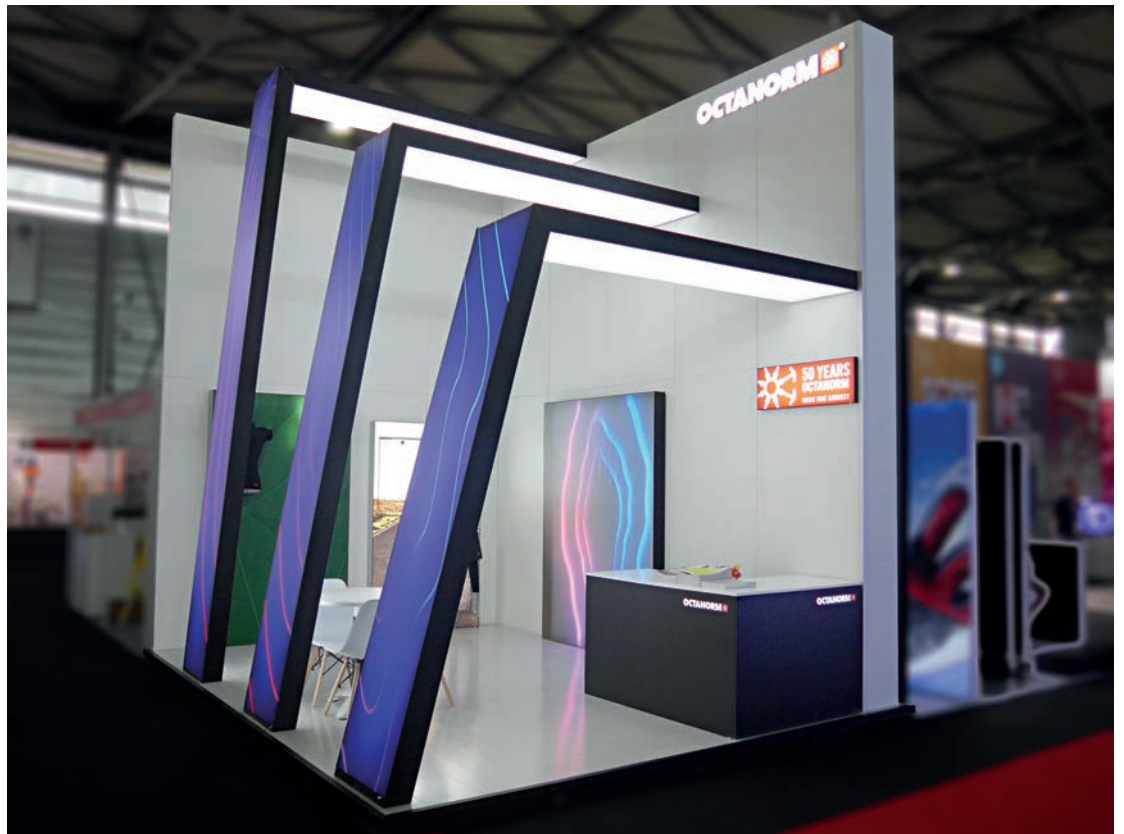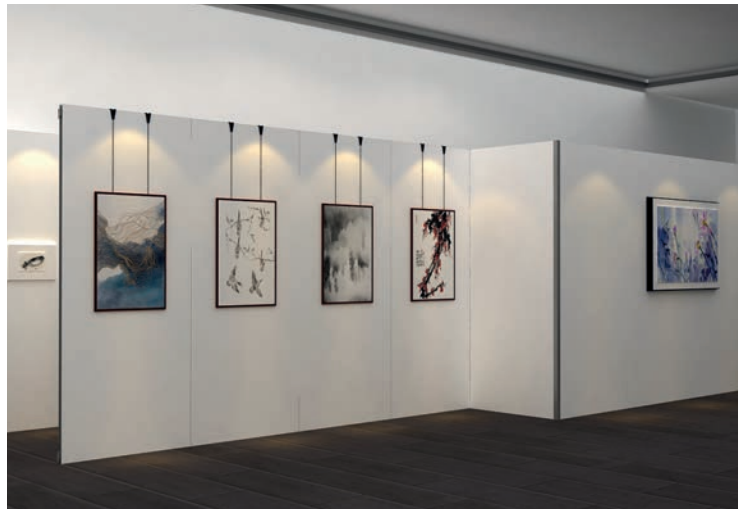




## IN USE

### OCTApanel





EXHIBITION SYSTEMS  
PROJECT SOLUTIONS  
PRESENTATION  
INTERIOR DESIGN  
CLEANROOM SYSTEMS



---

**OCTANORM® Germany****Head Office**

Raiffeisenstraße 39  
70794 Filderstadt  
T. +49 711 77003-0  
F. +49 711 77003-53  
info@octanorm.de  
www.octanorm.com

---

**EUROPE****OCTANORM® Belgium**

T. +32 475 35 60 76  
www.octanorm.be

**OCTANORM® France**

T. +33 1 8828 3932  
www.octanorm.fr

**OCTANORM® UK**

T. +44 20 85 45 2945  
www.octanorm.co.uk

**OCTANORM® Hellas**

T. +30 2310 79 6521  
www.octanorm.gr

**OCTANORM® Italia**

T. +39 031 2269715  
www.octsystem.it

**OCTANORM® Polska**

T. +48 22 773 0350  
www.octanorm.pl

**OCTANORM® Adria**

T. +386 590 56301  
www.octanormadria.com

**OCTANORM® Espana**

T. +34 930 019 424  
www.octanorm.es

**OCTANORM® Nordic**

T. +46 8 621 6500  
www.octanorm.se

**OCTANORM® Russia**

T. +7 495 565 7920  
www.octanorm.ru

---

**AMERICA****OCTANORM® North America**

T. +1 770 7 32 1520  
www.octanormna.com

**OCTANORM® México**

T. +52 55 5804 6325  
www.octanorm.com.mx

**OCTANORM® Argentina**

T. +54 11 43 12 4000  
www.octanorm.com.ar

---

**AFRICA****OCTANORM® South Africa**

T. +27 11 433 2010  
www.octanorm.co.za

---

**MIDDLE EAST****OCTANORM® Emirates**

T. +971 4 340 6888  
www.octanormemirates.net

---

**AUSTRALIA****OCTANORM® Australia**

T. +61 3 8773 8550  
www.octanorm.com.au

---

**ASIA****OCTANORM® Japan**

T. +81 45 511 8144  
www.octanorm.co.jp

**OCTANORM® China**

T. +86 512 6283 3336  
www.octanorm.cn