


The F 106 Cfl S1 connectors are placed at the corners and sides of F 304 Cfl S1, a composite of four panels. They can also be used to cover cable outlets.

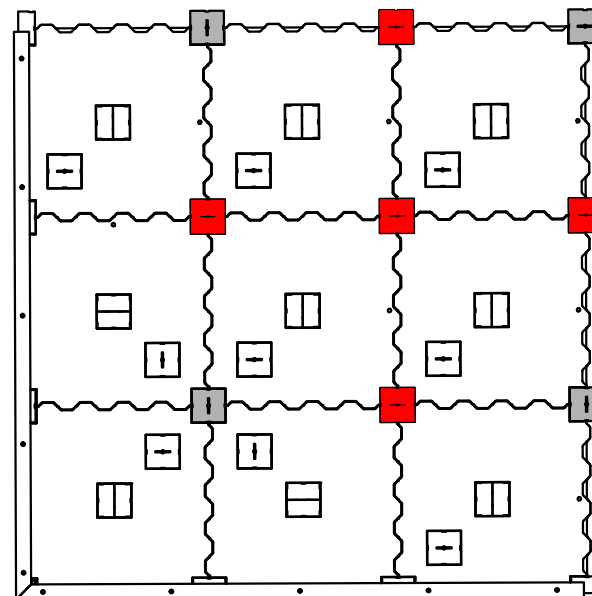

All dimensions in mm!
The drawing remains basically valid!