


Unscrew E 111-m until clamping is achieved

F (1 : 1)

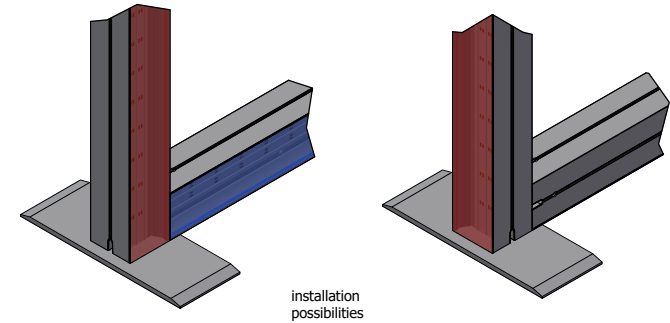

PLEASE NOTE:
The octalux uprights are not supplied with standard drill holes for the E 111-m countersunk screw. If the M 1408 foot plate is used, this hole must either be drilled individually in each upright or specified in the configurator when ordering an upright.