

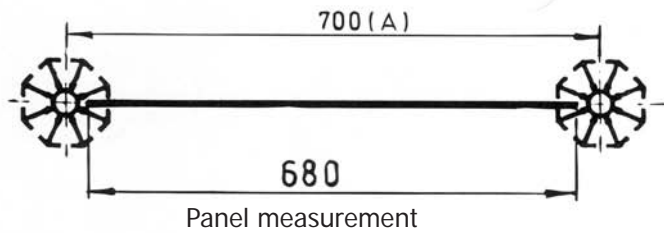


Measurements of wall panels 4 mm  
"Panel width"

$$\text{Beam length} + 20 = \text{Panel width}^*$$

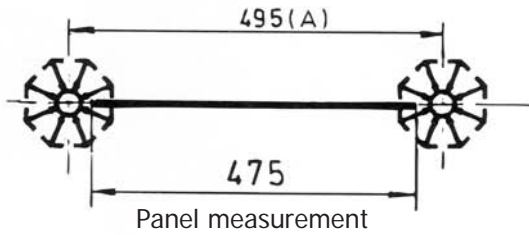

„Panel height“ see page W 3.3

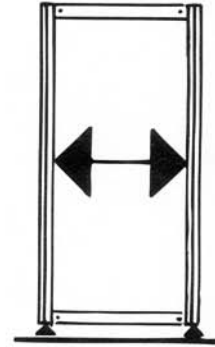

Depth of the groove of the upright  
(e.g. S 100) = 10,5 mm

\* Panel insertion depth = 2 x 10 mm

(Measurements in mm)

(A) = Axis measurement

